

# LogoTronic Exporter Guideline

The installation of the LogoTronic Exporter serves to provide data stored in the LogoTronic database. This data is then securely transmitted to the Koenig & Bauer Cloud via Kyana Connect. The data export occurs once daily and includes order, machine, and operational data. The data cannot be read and is password protected.

## 1. Installation of the LogoTronic Exporter on the LogoTronic Server

### 1. Download email attachment

- install\_logotronic\_export\_rename-as-bat.txt
- DBExportInstall-1.5.1.jar

### 2. Rename

- install\_logotronic\_export\_rename-as-bat.txt to install\_logotronic\_export.bat

### 3. Create directory

- Create a new folder with D:\Logotronic\_Export

### 4. Installation

- install\_logotronic\_export.bat
- Should be in the same folder as DBExportInstall-1.5.1.jar file.
- To start the installation process, install\_logotronic\_export.bat must be run with administrator privileges.
- Therefore, it may be necessary to start the file by right-clicking and selecting 'Run as administrator'.

### 5. Test

- Open the folder D:\Logotronic\_Export\export and check if new files have been added.
- Open the Task Scheduler and check the status of the 'logotronic-export' task.

#### Notice

If changes are required, the install\_logotronic\_export.bat file can be adjusted. Possible changes:



- DBExportInstall file: (Default value is DBExportInstall-1.5.1.jar)
- Export time: (Default value is 01:00)
- Export batch file path: (Default value is D:\Logotronic\_Export\exporter.bat)
- The .zip files are password protected and only accessible to Koenig & Bauer.

## 2. Activation of SMB on the LogoTronic Server

### 2.1. Create local user

- Create local user

- Win+R “MMC” Add-Snap-In “Computer Management”

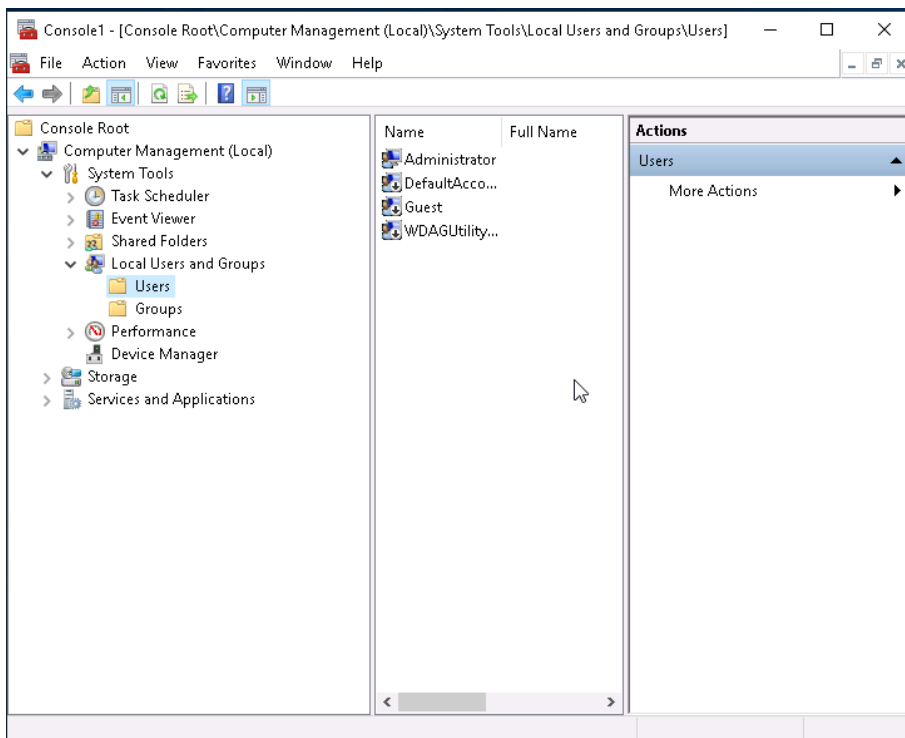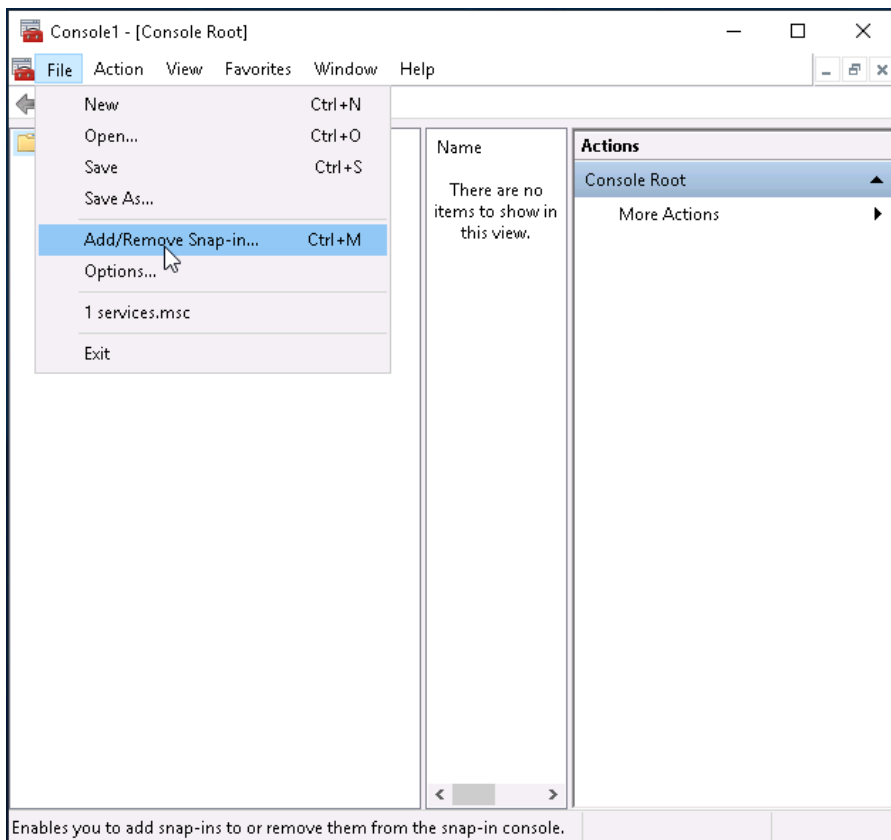

- local User and Groups
- right-click “New User”

New User?×

User name:

Full name:

Description:

Password:

Confirm password:

☐ User must change password at next logon

☐ User cannot change password

☒ Password never expires

☐ Account is disabled


Help

Create

Close

## 2.2. Share directory

- Select the folder 'D:\Logotronic\\_Export\export' for the SMB connection.
- Right-click on it → Properties.
- Select Sharing and Advanced Sharing.
- Activate 'Share this folder' and enter a name for the share 'export'.
- Search in the location of the same host for 'srv\\_kyana\\_connect'. Select the user for the permissions and give them the 'Modify' and 'Read' permissions.

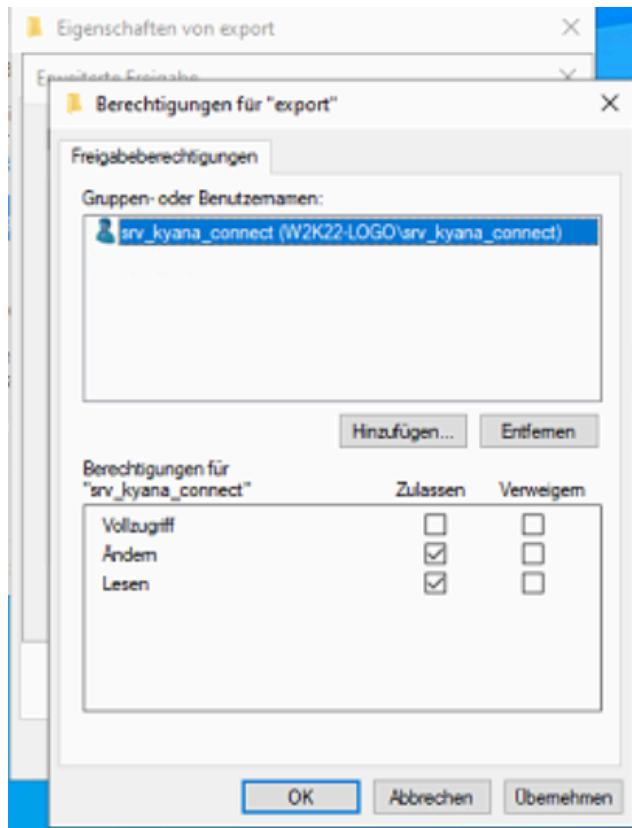

## 2.1. Grant directory permissions

- Switch to the Security tab.
- Modify - Add - Location of this server - search for 'srv\\_kyana\\_connect'.
- Grant all permissions up to 'Modify'.

### 3. Firewall

Check if the firewall settings for incoming and outgoing connections are activated  
(Outgoing is usually automatically allowed)

Win+R "MMC" Add-Snap-In "Windows Defender Firewall"



Explicitly for SMB we need:

- Incoming port 445 enabled

If outgoing data traffic is not permitted (which is normally the case), please also enable the corresponding ports for outgoing data traffic.